

Reverse and Neutral Indicators

The reverse indicator (1) and the neutral indicator (2) (Fig. 2-13) are located above the multi-function display.

The reverse indicator will light when the transmission is in reverse and the ignition switch is I (ON). The neutral indicator will light when the transmission is in neutral and the ignition switch is I (ON).

Oil High Temperature Indicator

If the engine oil gets too hot, the oil high temperature indicator (3) (Fig. 2-13) will light.

NOTE:

The oil high temperature indicator should come on when the ignition switch is turned I (ON). This is not a problem. The light should go off a few seconds after the engine is started.

CAUTION:

If the light does not come on with ignition switch I (ON), contact your authorized Honda dealer for assistance if you cannot correct the problem.

If the oil high temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool.

An electric fan is used to automatically provide sufficient air flow through the oil cooler/before the engine oil temperature becomes too high.

CAUTION:

- * Failure to stop the engine immediately after the oil high temperature indicator comes on will adversely affect the service life of the engine.**
- * Do not carry or store articles on the front bumper. This may restrict air flow through the engine oil cooler, causing it to overheat.**

If the oil high temperature indicator comes on often, have your FOURTRAX inspected by your Honda dealer.