


MAINTENANCE

Throttle grip free play can be adjusted at either end of the throttle cable. Replace any damaged parts before beginning this adjustment.

Minor adjustments are made with the upper adjuster. Adjust the free play by sliding the rubber cover off, loosening the lock nut and turning the adjuster.


Tighten the lock nut and put the rubber cover back. Recheck for proper throttle operation.

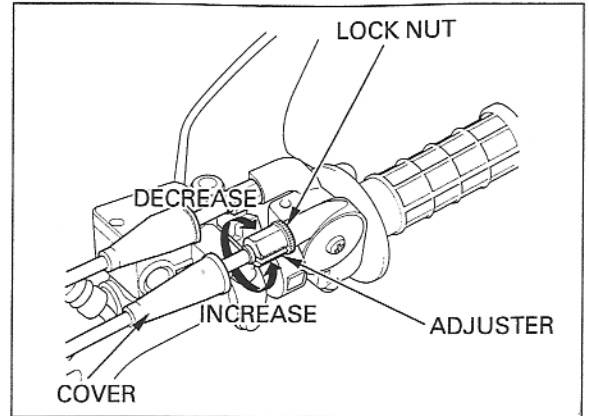

Major adjustments are made with the lower adjuster on the carburetor.

Remove the fuel tank (page 2-5). Adjust the free play by loosening the lock nut and turning the adjuster.

Tighten the lock nut. Recheck the throttle operation.

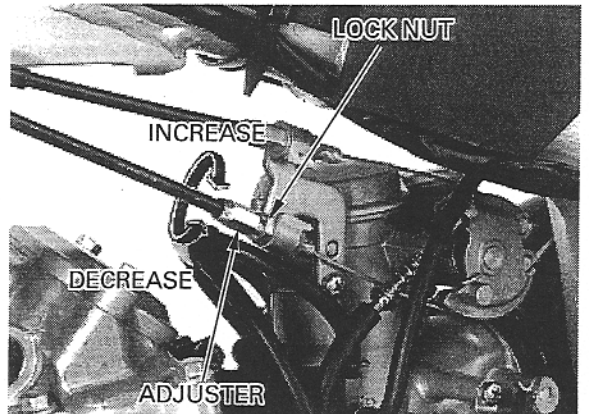


AIR CLEANER

Remove the left side cover (page 2-2).

Remove the air cleaner element.

Thoroughly wash the air cleaner in clean non-flammable or high flash point cleaning solvent. Then wash the element again in a solution of hot water and dishwashing liquid soap. Clean the inside of the air cleaner housing.

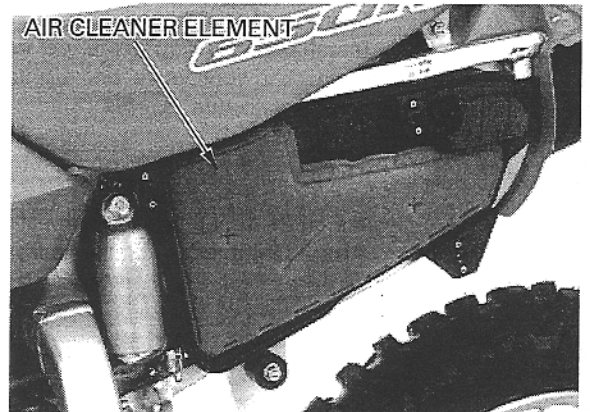

▲WARNING

Never use gasoline or low flash point solvents for cleaning the air filter element. A fire or explosion could result.

Allow the air cleaner to dry thoroughly. After drying, soak the air cleaner in clean Honda Foam Filter Oil or an equivalent.

Apply air filter oil to the entire surface of the air cleaner and rub it with both hands to saturate the element with oil.

Gently squeeze out excess oil. It is important not to over oil, or under-oil the element.

