


BRAKE LIGHT SWITCH

NOTE:

The front brake light switch does not require adjustment.

Adjust the brake light switch so that the brake light comes on just prior to the brake actually being engaged. If the light fails to come on, adjust the switch so that the light comes on at the proper time. Hold the switch body and turn the adjusting nut. Do not turn the switch body.

For switch inspection, see section 17.

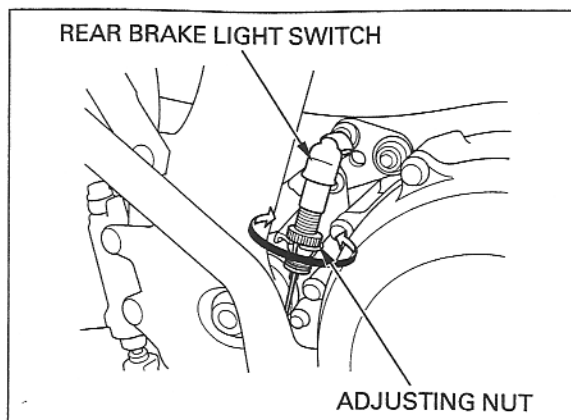

HEADLIGHT AIM


NOTE:

Adjust the headlight beam as specified by local laws and regulations.

Remove the front visor (page 2-3).

To make a vertical adjustment; loosen the headlight mounting bolts. Align the index lines on the headlight and the stay by moving the headlight up or down.


Tighten the headlight mounting bolts.

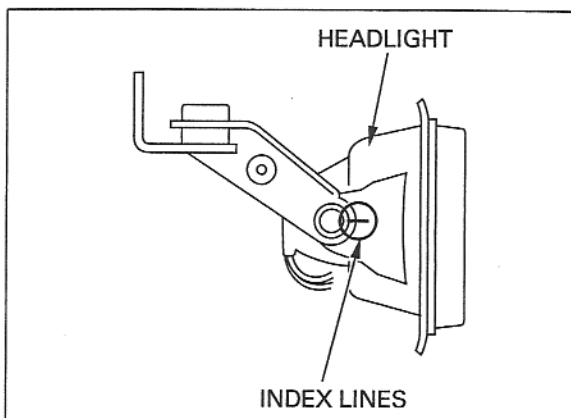

CLUTCH SYSTEM

Measure the clutch free play at lever end.

FREE PLAY: 10–20 mm (3/8–13/16 in)

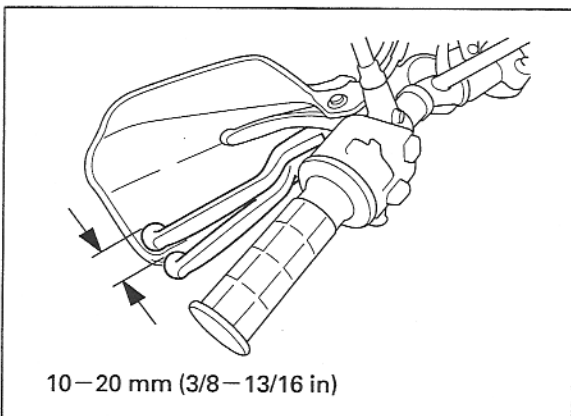

Adjust as follows:

Minor adjustments are made at the adjuster on the lever.

Pull the cover off.

Loosen the lock nut and turn the adjuster to obtain the free play.

Tighten the lock nut and install the dust cover.

If the adjuster is threaded out near its limit and the correct free play cannot be obtained, turn the adjuster all the way in and back out one turn.

Tighten the lock nut, install the dust cover and make a major adjustment as follows.

