


## FRONT WHEEL/SUSPENSION/STEERING

*Retainer will fall out if seal is not installed.* Apply grease to the right side dust seal lip and install the dust seal.  
Apply grease to the speedometer gear box tangs and retainer tangs.  
Install the speedometer gear box into the wheel hub, aligning the gear box tangs and retainer tangs.

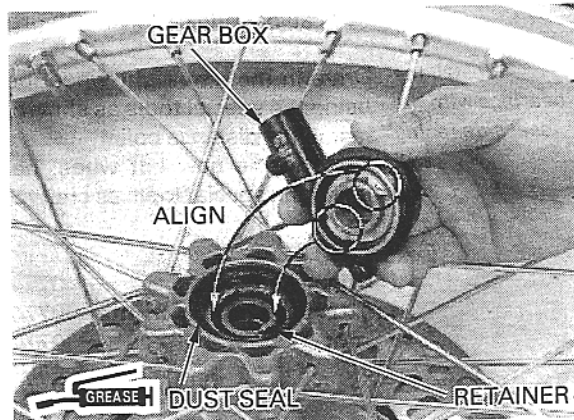

### INSTALLATION

#### NOTE:

If you removed the axle holder, install with the "↑" mark facing upward.

Clean the clamping and sliding surface of the axle shaft and axle holders.  
Apply a thin coat of grease to the axle shaft.

Install the front wheel.

#### CAUTION:

*Fit the brake caliper over the disc, taking care not to damage the brake pads.*

Align the speedometer gear box with the tang on the right fork leg as shown.  
Install and tighten the axle to the specified torque.

**TORQUE:** 88 N·m (9.0 kgf·m , 65 lbf·ft)

With the front brake applied, pump the front fork up and down several times to seat the axle and check the front brake operation.

Tighten the upper axle holder nuts, then tighten the lower nuts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

Connect the speedometer cable to the gear box and tighten the screw securely.

