

Front Wheel

Removal

1. Park your motorcycle on its centre stand on a firm, level surface.
2. Raise the front wheel off the ground by placing a support block under the engine.
3. Remove the speedometer cable by pushing the tab.
4. Remove the front axle nut cap.
5. Remove the front axle nut.
6. Remove the front axle shaft, front wheel and side collar.
 - Do not pull the brake lever while the wheel is removed.
 - Take care to prevent the brake caliper from scratching the wheel during removal.
 - Avoid getting grease, oil, or dirt on the disc or pad surface.

