



Position Light Bulb

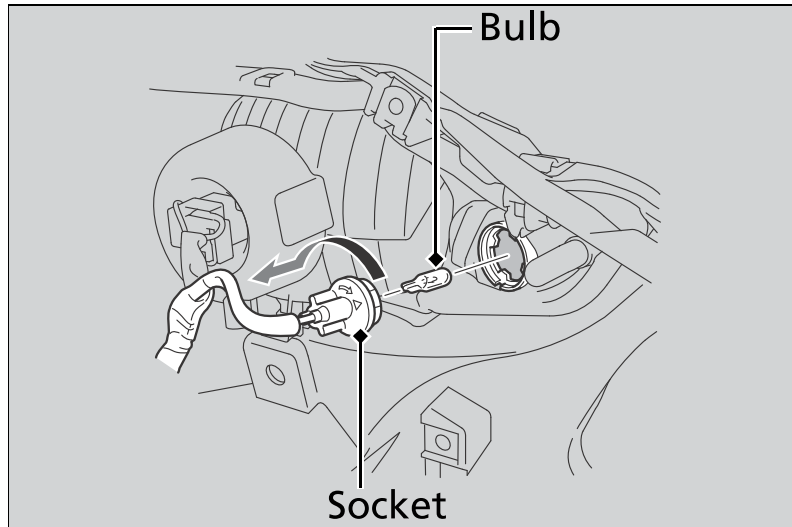

1. Remove the headlight case. ► P. 53
2. Turn the socket counterclockwise and pull it out.
3. Pull out the bulb without turning.
4. Install a new bulb and parts in the reverse order of removal.

Brake/Tail Light Bulb

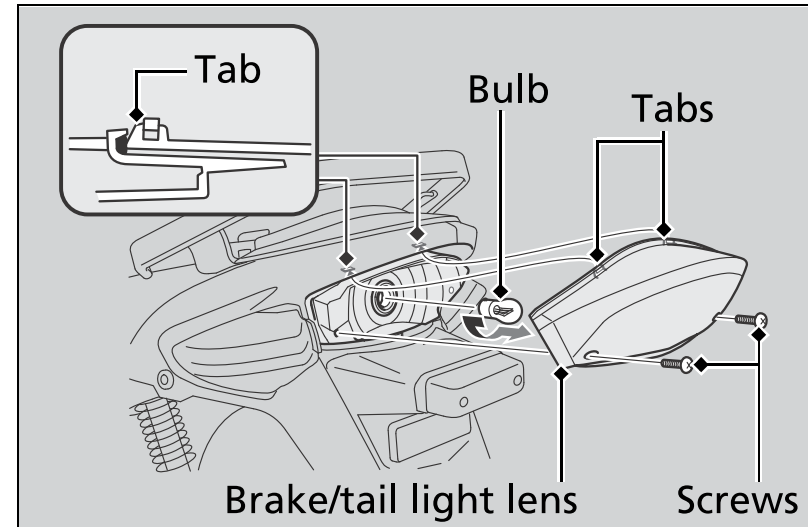

1. Remove the brake/tail light lens by removing the screws and releasing the tabs.
2. Slightly press the bulb in and turn it counterclockwise.
3. Install a new bulb and parts in the reverse order of removal.
 - After putting back the lens packing in place, install the brake/tail light lens.