


SEAT LOCK

The seat lock (1) is on the left side below the seat.

To open the seat, insert the ignition key (2) and turn it clockwise to unlock.

Pull the seat up.

To lock the seat, lower and push down on it until it locks. Make sure the seat is secure before riding.

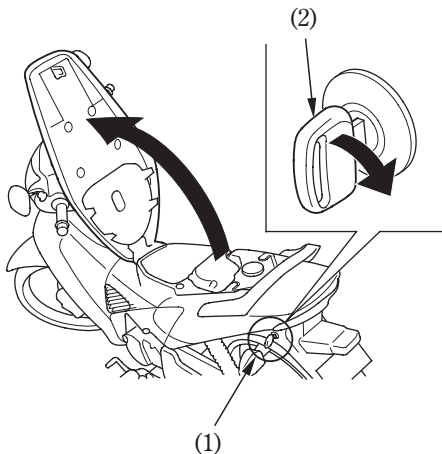

(1) Seat lock

(2) Ignition key