


LEG SHIELD

The right leg shield must be removed for air cleaner, spark plug and valve clearance maintenance.

Removal:

1. Remove the front top cover (page 43).
2. Remove the upper cover (1) by removing the screw A (2).
3. Remove the center cover (3) by removing the screw B (4) and screws C (5).

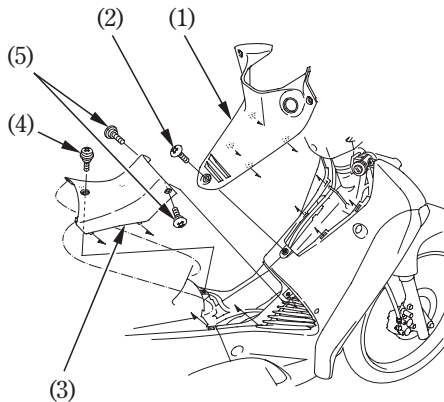

- (1) Upper cover
(2) Screw A
(3) Center cover

- (4) Screw B
(5) Screws C