

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded.

〈Use the start button〉

1. Open the throttle fully.
2. Press the start button for 5 seconds.
3. Follow the normal starting procedure.
If the engine starts with unstable idle, open the throttle slightly.
If the engine does not start, wait for 10 seconds, then follow steps 1–3 again.

〈Use the kickstarter〉

1. Turn the ignition switch to OFF.
2. Open the throttle fully and crank the engine several times with the kickstarter.
3. Turn the ignition switch to ON.
4. Follow the normal starting procedure. If the engine starts with unstable idle, open the throttle slightly.
If the engine does not start, wait for 10 seconds, then follow steps 1–4 again.

Ignition Cut Off

Your motorcycle is designed to automatically stop the engine and fuel pump if the motorcycle is over-turned (a banking sensor cuts off the ignition system). Before restarting the engine, you must turn the ignition switch to the OFF position and then back to ON.