

Rear Wheel Installation

- To install the rear wheel, reverse the removal procedure.
1. Install the side collars into the left and right side wheel hub.
 2. Tighten the rear axle nut and brake stopper arm nut to specified torque.
Rear axle nut torque:
59 N·m (6.0 kgf·m , 44 lbf·ft)
Brake stopper arm nut torque:
22 N·m (2.2 kgf·m , 16 lbf·ft)
 3. Adjust the drive chain (pages 83 – 84) and rear brake pedal freeplay (page 22).
 4. After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.
 5. < Except GR type >
Install the chain covers and tighten the bolts A and bolt B (page 82).

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

A used cotter pin may not effectively secure a fastener. Always replace a used cotter pin with a new one.