


Removal:


1. Make sure the ignition switch is OFF.
2. Open the seat (page 39).
3. Open the battery cover (page 42).
4. Remove the battery cover (1) and starter magnetic switch cover (2) by removing the screws (3).
5. Disconnect the negative (-) terminal lead (4) from the battery first, then disconnect the positive (+) terminal lead (5).

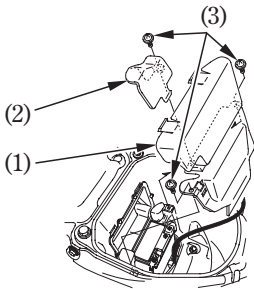

- (1) Battery cover
(2) Starter magnetic switch cover

(3) Screws

6. Pull out the battery (6) from the battery box.

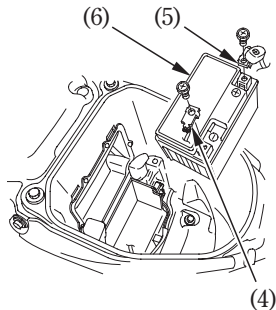

- (4) Negative (-) terminal lead
(5) Positive (+) terminal lead
(6) Battery

Installation:

1. Reinstall in the reverse order of removal. Be sure to connect the positive (+) terminal first, then the negative (-) terminal.
2. Check all bolts and other fasteners are secure.