
SERIAL NUMBERS


The frame and engine serial numbers are required by your dealer when ordering replacement parts. Record the numbers here for your reference. The frame serial number (1) is stamped on the left of the steering head. The engine serial number (2) is stamped on the crankcase just above the right foot peg.

FRAME NO.

ENGINE NO.

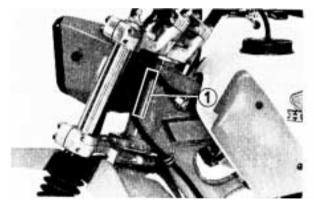

(1) Frame serial number

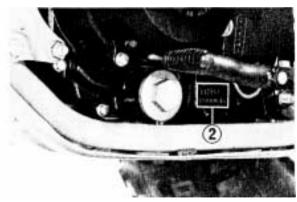

(2) Engine serial number