

CONTENTS

SERIAL NUMBER LOCATIONS	1	Tire	15
NOMENCLATURE	2-3	PRE-RIDING INSPECTION	16
OPERATING INSTRUCTIONS	4-21	STARTING THE ENGINE	17-18
Main/Headlight Switch	4	BREAK-IN PROCEDURE	19
Emergency Switch	4	RIDING	19
Parking Brake	5	PARKING	19
Gear Change Pedal	6	STORAGE	20
Neutral Indicator	7	MAINTENANCE	21-41
Posi-Torque Speed Range Selector	8	Maintenance Schedule	21-22
Choke Lever and High Altitude		Tool Kit	23-24
Compensator Knob	9	MAINTENANCE OPERATIONS	25-41
Fuel Valve	10	Engine Oil Level	25
Fuel Tank	11	Engine Oil Change	25-26
Oil Recommendation	12	Brake Adjustment	27-28
Viscosity	12	Drive Chain Adjustment	29
Engine Oil Level	13	Drive Chain Lubrication	30
Throttle Lever	14	Valve Tappet Adjustment	31-32