


① Emergency switch

PARKING BRAKE

To set the parking brake, pull the hand lever back, and lock it in this position by setting the lock lever ① as shown in the illustration.

Always apply the parking brake when parking on a hill or when leaving the machine with the engine running.

NOTE: Use of the parking brake in freezing weather may cause the brakes to freeze in the locked position.

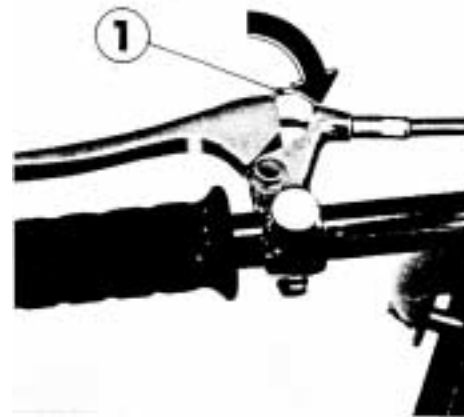

① Lock lever