


ENGINE OIL LEVEL

Raise or remove the seat for better access to the engine oil filler cap.

The oil filler cap contains a dipstick ② for measuring oil level. Oil level should be checked with the **ATC 90** resting on level ground and the oil filler cap touching the filler orifice but not screwed in. Oil level should be maintained between the upper ③ and lower ④ oil level marks on the dipstick.



① Seat latch

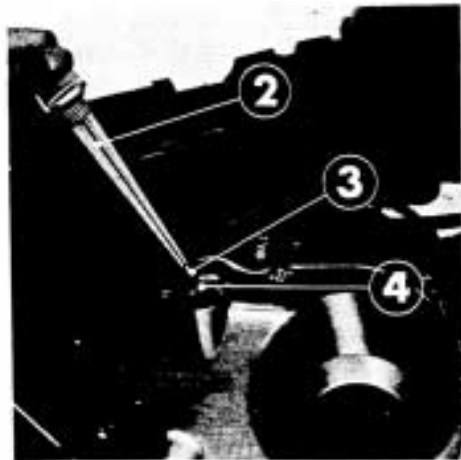

② Dipstick ③ Upper oil level mark
④ Lower oil level mark