



① Bend side electrode to adjust gap.

## AIR CLEANER MAINTENANCE

The air filter element accumulates dust and must be cleaned periodically. If the **ATC 90** is ridden in unusually dusty areas, the filter element must be cleaned at more frequent intervals than specified in the **MAINTENANCE SCHEDULE**.

1. Remove the mounting bolts ② and the air cleaner tube clamp ①,
2. Unscrew the air filter setting bolt ③, and withdraw the filter from the housing.
3. Remove the filter element ④ from its core, and wash the filter element in clean stoddard solvent and allow

to dry thoroughly.

4. Soak the filter element in clean gear oil (SAE 80~SAE 90) until saturated, then squeeze out excess oil.
5. Reassemble by reversing the disassembly sequence.

### **WARNING:**

**Gasoline or low flash point solvents are highly flammable and must not be used to clean air filter elements.**