

SPARK ARRESTOR MAINTENANCE

The exhaust system spark arrestor must be purged of accumulated carbon periodically.


1. Shift the gear change pedal to place the transmission in "Neutral" position.
2. Stop the engine.
3. Remove the diffuser pipe mounting bolt ① and slide out the diffuser pipe ②.
4. Start the engine, and purge accumulated carbon from the spark arrestor by momentarily revving up

the engine.

5. Stop the engine.
6. Reinstall the diffuser pipe with the mounting bolt.

WARNING :

Servicing must be performed when the engine cools down completely.

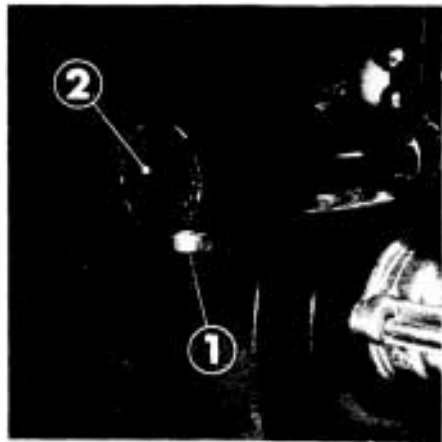

- ① Diffuser pipe mounting bolt
- ② Diffuser pipe