


## INSTALLING THE REAR WHEELS

Reinstall the rear wheels by reversing the disassembly sequence.

When installing the rear axle, align the axle so that the four pins in the sprocket shaft of the ATC fit into the corresponding holes in the drive flange of the axle.

Replace any axle nut cotter pins that appear damaged or broken.

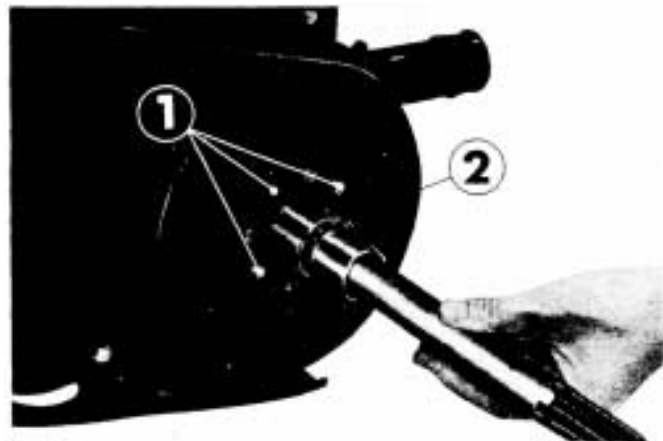

- ① PINS
- ② FLANGE