


AIR CLEANER

Refer to the Safety Precautions on page 108.


The air cleaner should be serviced at regular intervals (page 110). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the right side cover (page 86).
2. Remove the attaching screws (1) and air cleaner housing cover (2).

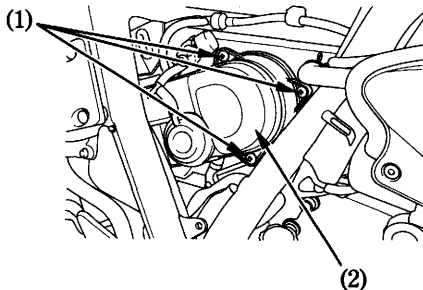

- (1) Attaching screws
(2) Air cleaner housing cover

3. Pull out the air cleaner (3) and check it for any damage.
Replace the air cleaner if it is excessively dirty, torn or damaged.
4. Install the air cleaner.
5. Install the removed parts in reverse order of removal.

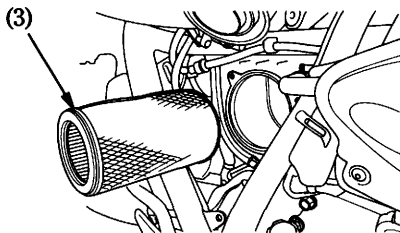

- (3) Air cleaner