

**Fuse Box:
CB1300/S**

The fuse boxes are located behind the left side cover.

The specified fuses are:

10A, 20A



CB1300A/SA

The fuse boxes are located behind the left side cover.

The specified fuses are:

10A, 20A, 30A

1. Remove the left side cover (page 86).
2. Open the fuse box covers (1).
3. Pull out the old fuse and install a new fuse.
The spare fuses (2) are located in the fuse box.
4. Close the fuse box cover and install the left side cover.

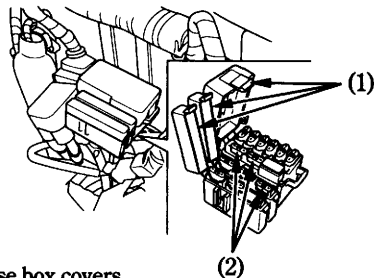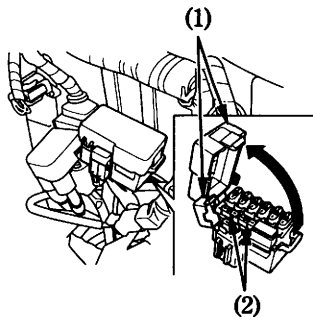

- (1) Fuse box covers
(2) Spare fuses