

Indicators


Operation Guide

← Left turn signal indicator

→ Right turn signal indicator



 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned on with the engine stop switch in the  (Run) position.

If it comes on while engine is running:

 **P.77**