





- Current fuel mileage: Current instant fuel mileage. If your speed is less than 7 km/h (5 mph), "---" is displayed. When "---" is displayed at speeds above 7 km/h (5 mph), go to your dealer for service.
- Average fuel mileage: Average fuel mileage since tripmeter A was reset. When "---" is displayed, go to your dealer for service.
- Fuel consumption: Total fuel consumption since tripmeter A was reset. When "---" is displayed, go to your dealer for service.
  - ► To reset the average fuel mileage and fuel consumption: ► P. 24

continued 23







