


# Removing & Installing Body Components

## Seat

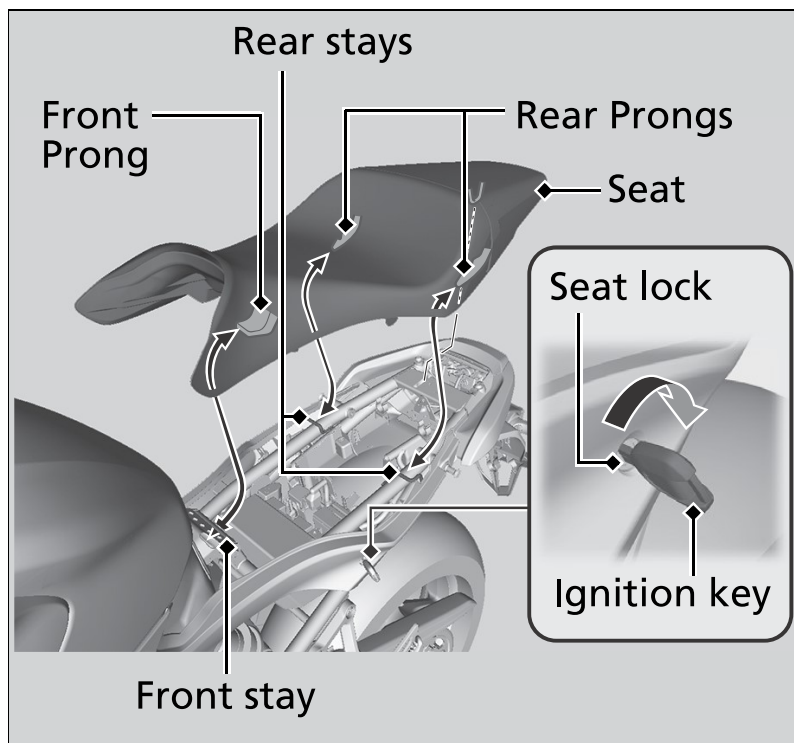

### Removal

1. Insert the ignition key into the seat lock, and turn and hold the key clockwise to unlock the seat.
2. Pull the rear of the seat back and up.

### Installation

1. Insert the front and rear prongs into the front and rear stays on the frame.
  2. Push forward and down on the rear of the seat until it locks in place.  
Make sure that the seat is locked securely in position to pull it up lightly.
- The seat locks automatically when installed. Take care not to lock your key in the compartment under the seat.