

<b>(Ref.No.) Description</b>	<b>Function</b>
(1) Tripmeter	Shows mileage per trip.
(2) Speedometer	Shows riding speed.
(3) Odometer	Shows accumulated mileage.
(4) Tachometer	Shows engine rpm.
(5) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p><b>CAUTION:</b></p> <p><b>* Running the engine beyond recommended maximum engine speed (tachometer red zone) can damage the engine.</b></p>
(6) Side stand indicator	<p>Lights when the side stand is put down.</p> <p>Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 66) is activated.</p>