


● Replacing Light Bulbs


When exchanging the light bulbs, always replace the bulb with that of the specified type and rating. This is important to prevent the electrical lighting circuit from malfunctioning.

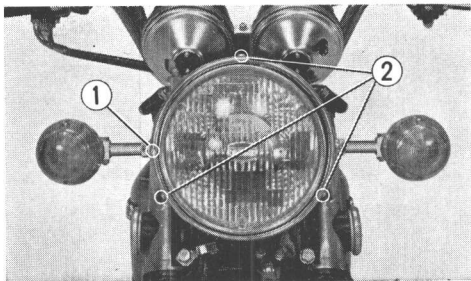

- ① Horizontal adjusting screw
- ② Holding screw

1. Headlight Bulb Replacement Procedure

- a. Remove horizontal adjusting screw ① and holding screws ②.
- b. Remove the upper and lower retaining lock pins ③ and screws ④ from the rim.
- c. Remove the two sealed beam unit retaining screws ⑤
- d. Install a new sealed beam unit. Assemble by reversing the procedure described above.

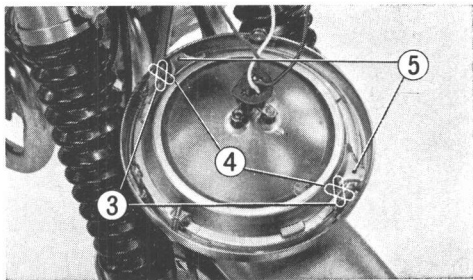

- ③ Lock pins
- ④ Lock screws
- ⑤ Sealed beam unit retaining screws