


## Digital Clock


Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Press and hold control button B (2) for more than 2 seconds. The clock will be set in the adjust mode with the display blinking.

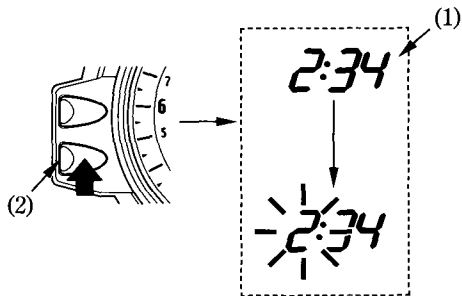

- (1) Digital clock  
(2) Control button B

3. To set the hour, press control button A (3) until the desired hour is displayed.
  - The time is advanced by one hour, each time the button is pressed.
  - The time advances fast when the button is pressed and held.

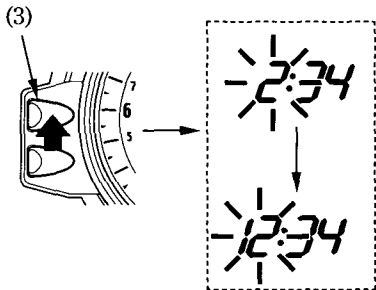

- (3) Control button A