



3. Remove the lower cowl (page 81 ).
4. Remove the screw (3) on the right middle cowl (4) and pull it outwards.

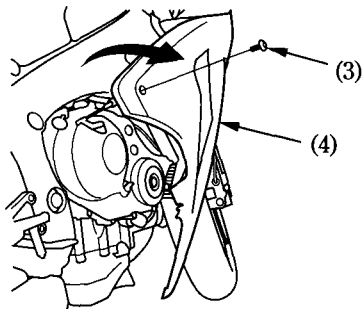

- (3) Screw
- (4) Middle cowl

5. Loosen the lock nut (5) at the lower end of the cable. Turn the adjusting nut (6) to obtain the specified freeplay. Tighten the lock nut and check the adjustment.
6. Install the right middle cowl with screw.
7. Install the lower cowl (page 81 ).

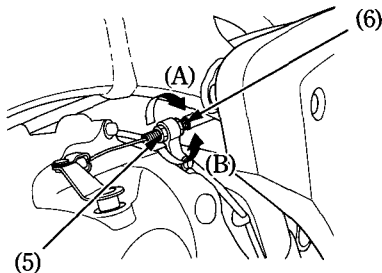

- (5) Lock nut
- (6) Adjusting nut
- (A) Increase freeplay
- (B) Decrease freeplay