

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]							REFER TO PAGE	
			× 1,000 km	1	6	12	18	24	30		36
			× 1,000 mi	0.6	4	8	12	16	20		24
			MONTH	6	12	18	24	30	36		
	DRIVE CHAIN		EVERY 1,000 km (600 mi) I, L							120	
	DRIVE CHAIN SLIDER				I		I		I	126	
	BRAKE FLUID	NOTE (3)		I	I	R	I	I	R	52	
	BRAKE PADS WEAR			I	I	I	I	I	I	137	
	BRAKE SYSTEM		I		I		I		I	52	
*	BRAKELIGHT SWITCH				I		I		I	145	
*	HEADLIGHT AIM				I		I		I	87	
	CLUTCH SYSTEM		I	I	I	I	I	I	I	55	
**	EXHAUST GAS CONTROL ACTUATOR CABLE		EVERY 24,000 km (16,000 mi) I							—	
	SIDE STAND				I		I		I	128	
*	SUSPENSION				I		I		I	127	
*	NUTS, BOLTS, FASTENERS		I		I		I		I	—	
**	WHEELS/TYRES				I		I		I	—	
**	STEERING HEAD BEARINGS		I		I		I		I	—	