

Speedometer

Shows riding speed.


Speed Unit Change

(E type only)

The speedometer displays both “km/h” and “mph”.

Push and hold both the MODE (2) and SET (3) button to select “km/h” or “mph”.

This function does not operate while set the clock in the adjust mode.

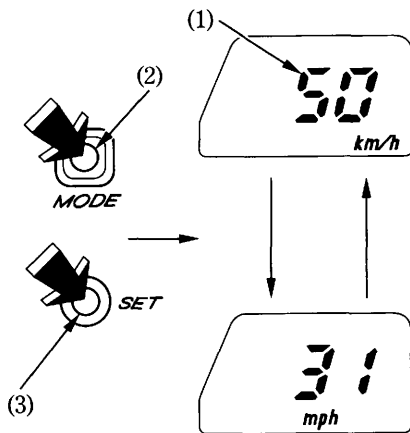

- (1) Speedometer
- (2) MODE button

- (3) SET button