


1. Remove the lower cowl (page 58 ).
2. Remove the upper cowl cover (page 60 ).
3. Remove the wind guard (page 61 ).
4. Remove the inner panel (page 62 ).
5. Remove the oil cooler upper mount bolts (1) and harness guide (2).
6. Remove the oil cooler lower mount bolts (3).
7. Move the oil cooler (4) forward.

**NOTICE**

Damage to the oil cooler fins can reduce cooling or cause a system leak. Handle the oil cooler with care.

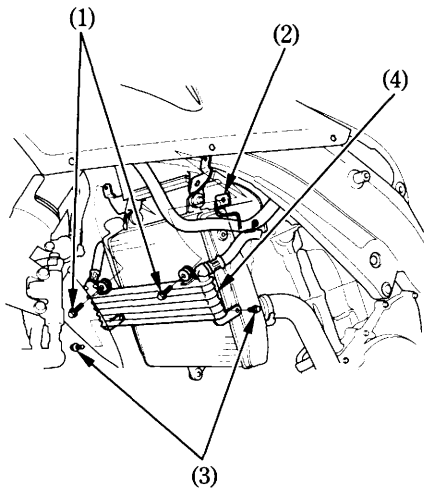

- |                       |                       |
|-----------------------|-----------------------|
| (1) Upper mount bolts | (3) Lower mount bolts |
| (2) Harness guide     | (4) Oil cooler        |