

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								Refer to Page
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
		NOTE	MONTH								
* FUEL LINE						I		I		I	—
* THROTTLE OPERATION						I		I		I	84
AIR CLEANER		NOTE (2)					R			R	76
CRANKCASE BREATHER		NOTE (3)				C	C	C	C	C	78
* SPARK PLUG						EVERY 24,000 km I, EVERY 48,000 km R					—
* VALVE CLEARANCE						I				I	—
ENGINE OIL						R		R		R	79
ENGINE OIL FILTER						R		R		R	81
* ENGINE IDLE SPEED						I	I	I	I	I	—
RADIATOR COOLANT		NOTE (4)						I		I	31, 85
* COOLING SYSTEM								I		I	—
* SECONDARY AIR SUPPLY SYSTEM								I		I	—