

WHEEL REMOVAL

Refer to the Safety Precautions on page 69 .


This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your dealer for this service.

(CBR250RA only)


When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

Front Wheel Removal

1. Support the motorcycle securely and raise the front wheel off the ground using a safety stand or a hoist.
2. Remove the front axle nut (1).
3. Loosen the axle pinch bolt (2).
4. Remove the front axle shaft (3), front wheel and side collar.

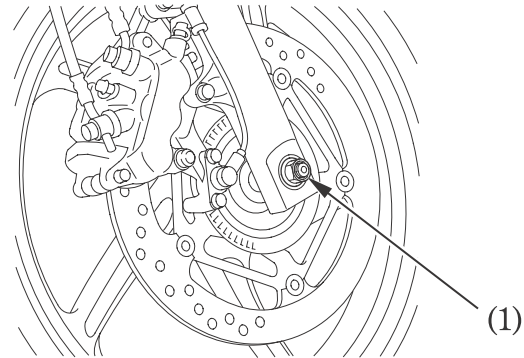

(1) Front axle nut

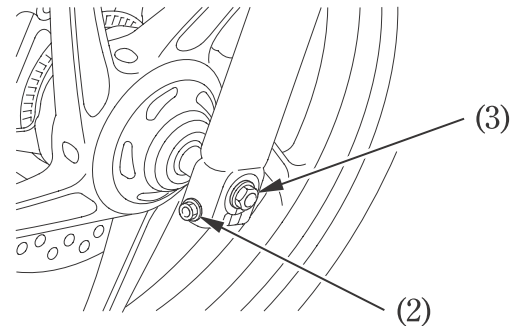

(2) Axle pinch bolt
(3) Front axle shaft