

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓	ODOMETER READING [ NOTE (1) ]							Refer to		
			x 1,000 km	1	6	12	18	24	30		36	
			x 1,000 mi	0.6	4	8	12	16	20		24	
		NOTE	MONTH		6	12	18	24	30	36		
DRIVE CHAIN				I, LEVERY 1,000km ( 600mi )							Pages 72-76	
DRIVE CHAIN SLIDER						I			I		I	Page 77
BRAKE FLUID		NOTE (3)				I	I	R	I	I	R	Pages 18-21
BRAKE PAD WEAR						I	I	I	I	I	I	Page 87
BRAKE SYSTEM					I				I		I	Pages 18-21
* BRAKE LIGHT SWITCH								I			I	-
* HEADLIGHT AIM								I			I	-
CLUTCH SYSTEM					I	I	I	I	I	I	I	Pages 22-23
SIDE STAND								I			I	Page 79
* SUSPENSION								I			I	Page 78
* NUTS, BOLTS, FASTENERS					I			I			I	-
** WHEELS/TYRES								I			I	-
** STEERING HEAD BEARINGS					I			I			I	-

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

\* \* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

NOTES: (1) At higher odometer readings, repeat at the frequency interval established here.

(2) Service more frequently when riding in unusually wet or dusty areas.

(3) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.

(4) Switzerland and Austria type only.