

Installation Notes:

Position the front wheel between the fork legs and insert the axle from the left side, through the left fork leg and when hub.

CAUTION:

***When installing the wheel, carefully fit the left brake disc between the brake pads to avoid damaging the pads.**

Tighten the axle bolt to the specified torque .

Front axle torque :

60 N·m (6.0 kg-m , 43 lb-ft)

Fit the caliper over the disc, taking care not to damage the brake pads. Install the caliper fixing bolts, and tighten to a torque of :

31 N·m (3.1 kg-m , 22 lb-ft)