


License Light Bulb

1. Remove the wire harness (1) from the clamp (2).
2. Turn the socket (3) 90° counterclockwise, and remove it.
3. Pull out the bulb (4) without turning.
4. Install a new bulb in the reverse order of removal.

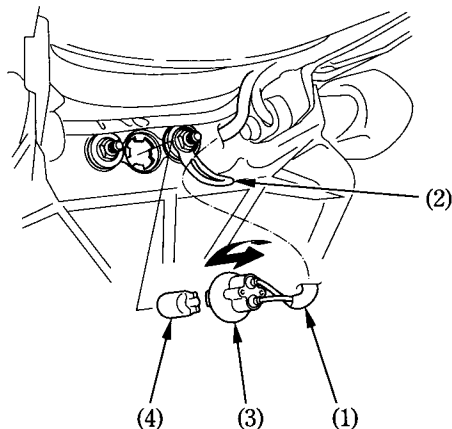

- (1) Wire harness
- (2) Clamp
- (3) Socket
- (4) Bulb