

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [ NOTE (1) ]								Refer to Page		
			× 1,000 km	1	6	12	18	24	30	36			
			× 1,000 mi	0.6	4	8	12	16	20	24			
DRIVE CHAIN			I, L EVERY 1,000km (600mi)								104		
DRIVE CHAIN SLIDER					I			I		I	110		
BRAKE FLUID		NOTE (3)			I	I	R	I	I	R	35		
BRAKE PAD WEAR					I	I	I	I	I	I	118		
BRAKE SYSTEM					I			I		I	35		
* BRAKE LIGHT SWITCH								I		I	—		
* HEADLIGHT AIM								I		I	—		
CLUTCH SYSTEM					I	I	I	I	I	I	38		
** EXHAUST VALVE CONTROL CABLE					EVERY 24,000km (16,000mi) I								—
SIDE STAND								I		I	112		
* SUSPENSION								I		I	111		
* NUTS, BOLTS, FASTENERS					I			I		I	—		
** WHEELS/TYRES								I		I	—		
** STEERING HEAD BEARINGS					I			I		I	—		