


### Fuse box:

The fuse box is located under the right upper shroud (1) on the upper fairing.

The specified fuses are:

10A and 20A

1. Pull the tab (2) and remove the screws (3).
2. Turn the clip (4) and remove the right upper shroud.
3. Open the fuse box cover (5).
4. Pull out the old fuse and install a new fuse.  
The spare fuses (6) are located in the fuse box.
5. Close the fuse box cover and install the right upper shroud.

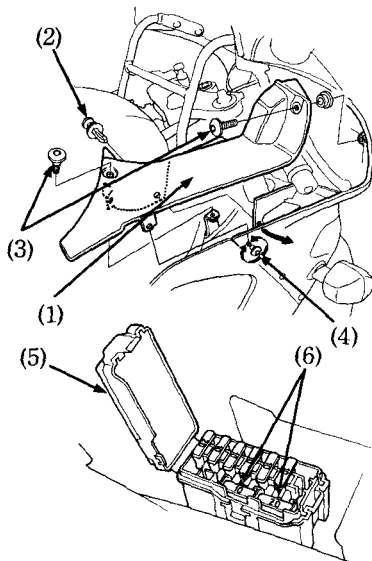

- |                        |                 |
|------------------------|-----------------|
| (1) Right upper shroud | (2) Tab         |
| (3) Screws             | (4) Clip        |
| (5) Fuse box cover     | (6) Spare fuses |