

## SPARK PLUGS

(Refer to the maintenance precautions on page 67).

Recommended plugs:


Standard:

CR9EH-9 (NGK) or  
U27FER 9 (NIPPONDENSO)

For cold climate: (Below 5°C, 41°F)

CR8EH-9 (NGK) or  
U24FER 9 (NIPPONDENSO)

1. Remove the right and left middle fairing (page 47 ) to remove the spark plugs.
2. Disconnect the spark plug caps from the spark plugs.
3. Clean any dirt from around the spark plug base. Remove the spark plug using the plug wrench (1) furnished in the tool kit.

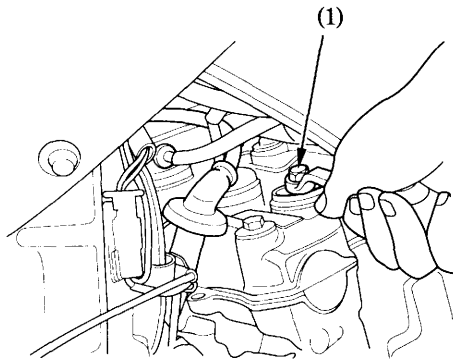

(1) Spark plug wrench