


## Rear seat

To open the rear seat (4), insert the ignition key (5) into the seat lock (6) and turn it clockwise.

To close the rear seat, push down on the rear of the seat.

### CAUTION:

**\* Be sure the seat is locked securely in position after installation.**

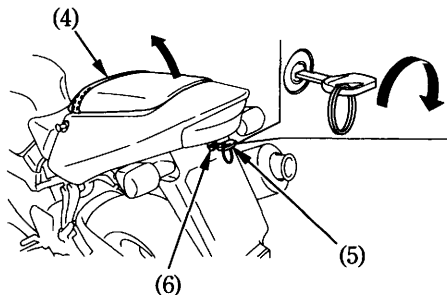

(4) Rear seat

(6) Seat lock

(5) Ignition key