

9. Clutch – check operation, and adjust if necessary (pages 16 – 17).
10. Spark plug and high tension terminal – check for looseness.
11. Engine stop button – check for proper function (page 29).
12. Nuts, bolts, fasteners – check the front wheel to see that the axle nut and axle holder nuts are tightened securely. Check security of all other nuts, bolts, and fasteners.