


## Battery Removal

The battery (4) is in the battery compartment behind the left side cover.

1. Remove the left side cover (page 33).
2. Remove the battery holder (1).
3. Disconnect the negative (-) terminal lead (2) from the battery first, then disconnect the positive (+) terminal lead (3).
4. Pull out the battery (4) from the battery box.

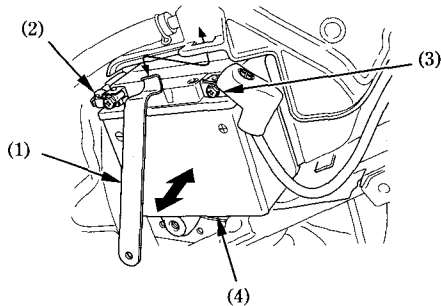

- (1) Battery holder
- (2) Negative (-) terminal lead
- (3) Positive (+) terminal lead
- (4) Battery