


SIDE STAND

Refer to the Safety Precautions on page 47.

Check the side stand spring for damage and loss of tension, and the side stand assembly for freedom of movement.

If the side stand is squeaky or stiff, clean the pivot area and lubricate the pivot bolt with clean engine oil.

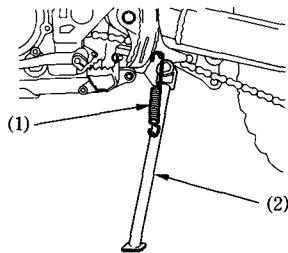

(1) Side stand spring

(2) Side stand