


Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 55

Fuse Box Fuses

1. Remove the seat. ► P. 64
2. Remove the fuse box cover.
3. Pull the fuses out with the fuse puller in the tool kit one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
 - Spare fuses are provided on the back of the fuse box cover.
4. Install the fuse box cover.
5. Install the seat.

CTX700A

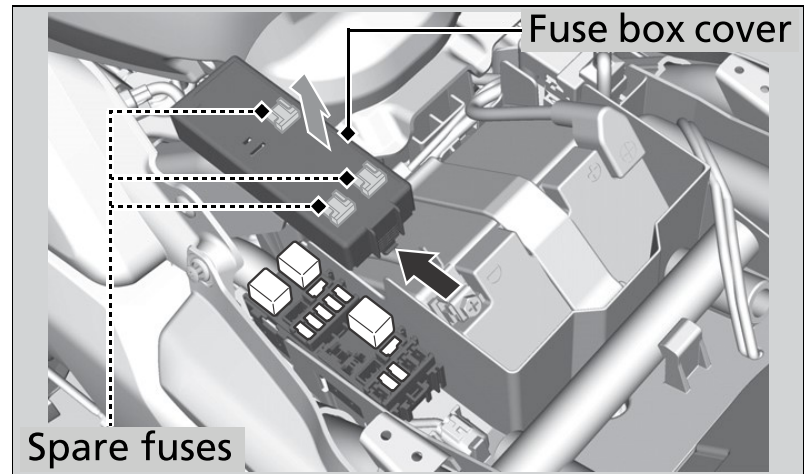

CTX700D

