


### Position Light Bulb

1. Turn the position light reflector (1) counterclockwise and remove it.
2. Pull out the bulb (2) without turning.
3. Install a new bulb in the reverse order of removal.

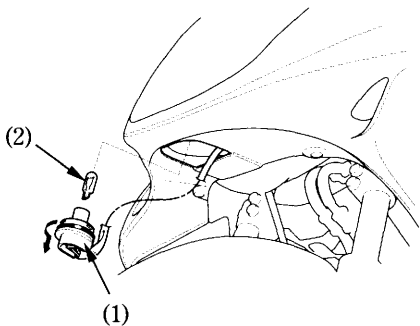

- (1) Position light reflector  
(2) Bulb