

● **Tail/stoplight warning light (red):**

This light monitors tail/stoplight operation.

Taillight. . . . The circuit is normal if the warning light remains off when the ignition switch is in the "ON" position. The red warning light will be illuminated as an indication of a burned out taillight bulb. If the taillight fails, the stoplight will automatically be illuminated. The intensity, however, will be less than normal. Replace a failed bulb as soon as possible.

Stoplight. . . . The red warning light should be illuminated when either brake is operated with the ignition switch in the "ON" position.

If the red warning light is not illuminated when either brake is operated, it serves as an indication that the stoplight bulb is burned out or that there is an abnormality in the circuit. Consult your nearest Honda dealer.

