

## Engine Stop Switch

The three position engine stop switch 1 is located on top of the right handlebar grip switch housing. In the "RUN" position the ignition circuit will be completed and engine will operate. In the "OFF" position the ignition circuit will be open and the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the "RUN" position.

***NOTE: If your motorcycle is stopped with the ignition switch on and the engine stop switch off, the headlight and taillight will still be on, resulting in battery discharge.***


## Starter Button

The starter button 2 is located directly below the engine stop switch 1.

When the starter button is pressed the starter motor will crank the engine.

As long as the starter button is pressed for cranking the engine, the headlight will automatically go out, but the taillight stays on.

Refer to pages 27~28 for the correct starting procedure.

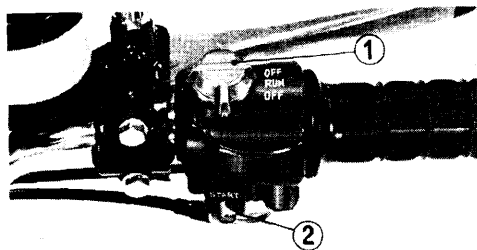

- 1. Engine stop switch
- 2. Starter button