

Final drive gear oil change:

1. Remove the oil filler cap ¹ (page 43).
2. Place drain pan under the final drive gear case to catch the oil, and then remove the oil drain plug ³.


WARNING: When draining or filling, take care not to allow foreign materials to enter the case and not to allow the gear oil to contaminate the tire and wheel.

3. After the oil stops draining from the gear case, rotate the rear wheel by hand to drain any oil which may be left in the recesses of the case.
4. When the oil has been completely drained, reinstall the drain plug ³ securely, making sure that the plain washer is in good condition.

5. Fill the gear case up to filler neck with fresh oil of the recommended grade. See page 24.

Oil capacity: 6.8~7.5 ozs. (200~220 cc)

6. Reinstall the filler cap securely.

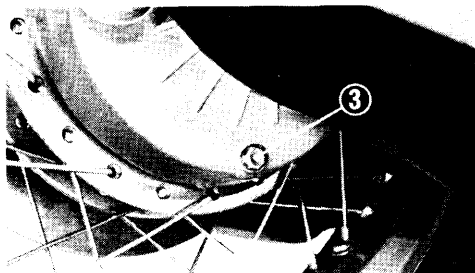

3: Oil drain plug