


6. Check or adjust the clearance of the valves indicated by "✓" in the table below as in steps "3" and "4" above.

Cylinder	No. 1	No. 2	No. 3	No. 4
Intake valve	○	×	×	○
Exhaust valve	○	×	×	×

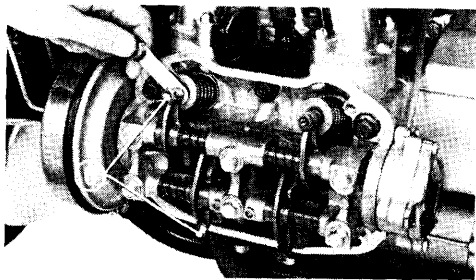


6. Tappet adjusting screws on #2 cylinder

Air Cleaner Maintenance

Air cleaner element cleaning and/or replacement intervals depend on motorcycle operating conditions. Your Honda dealer can help you to determine the frequency of cleaning or replacing the element.

1. Open the top and side compartments and remove the tool tray.
2. Remove the air cleaner case cover (1) by unscrewing the wing nut (2). Remove the air cleaner element (3) (page 54).

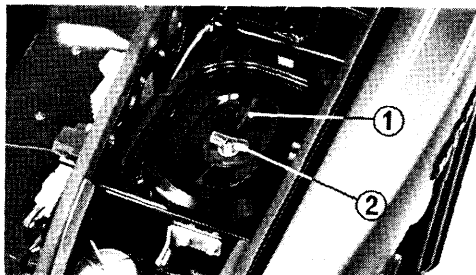

1. Air cleaner case cover
2. Wing nut