



Front Fork Oil Change

To maintain good riding characteristics and increase fork service life, the oil in the front fork should be changed periodically.


1. Set the motorcycle on the center stand.
2. Unscrew the front fork drain plug ① at the bottom of each fork cylinder. Drain the oil by pumping the fork while the plugs are removed. Replace the plug securely after draining.
3. Place a jack under the crankcase to support the motorcycle.
4. Remove the filler plug caps ② and unscrew the filler plugs ③.
5. Pour **5.8 6.1 ozs (170 180 cc)** of premium quality ATF (automatic transmission fluid) into each fork leg.
6. Securely tighten the fork filler plugs ③ and replace the filler plug caps ②.
7. Remove the jack from under the engine.

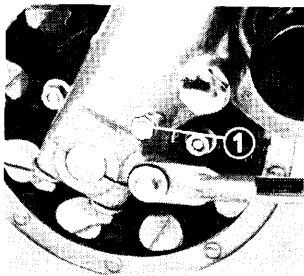

① Front fork drain plug

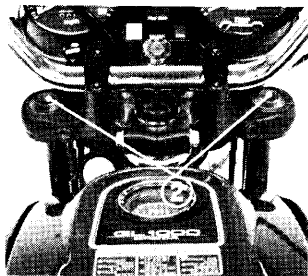

② Filler plug caps

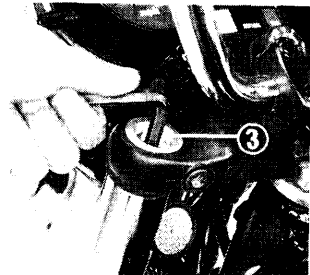

③ Fork filler plug