

# FEATURES (Not required for operation)

---

## CASSETTE DECK

### Loading

Push the eject button to open the cassette lid and slide the tape into the deck, following the inserting direction shown on the lid.

### CAUTION:

- *Check there is no slack in the tape before inserting the cassette tape into the deck.*
- *Make sure the lid is secured after inserting the cassette tape into the deck.*
- *Do not open the cassette lid in the rain. Before opening the cassette lid, wipe off any dirt or water on the outer surface.*
- *The use of 120-minute cassette tapes is not recommended. If necessary to use 120-minute tapes, do not switch the tape operation mode frequently. Most 120-minute tape stretches easily and can become tangled in the player mechanism.*

### Eject Button

The cassette is ejected from the deck when this button is depressed.

